


Running Engine Stand

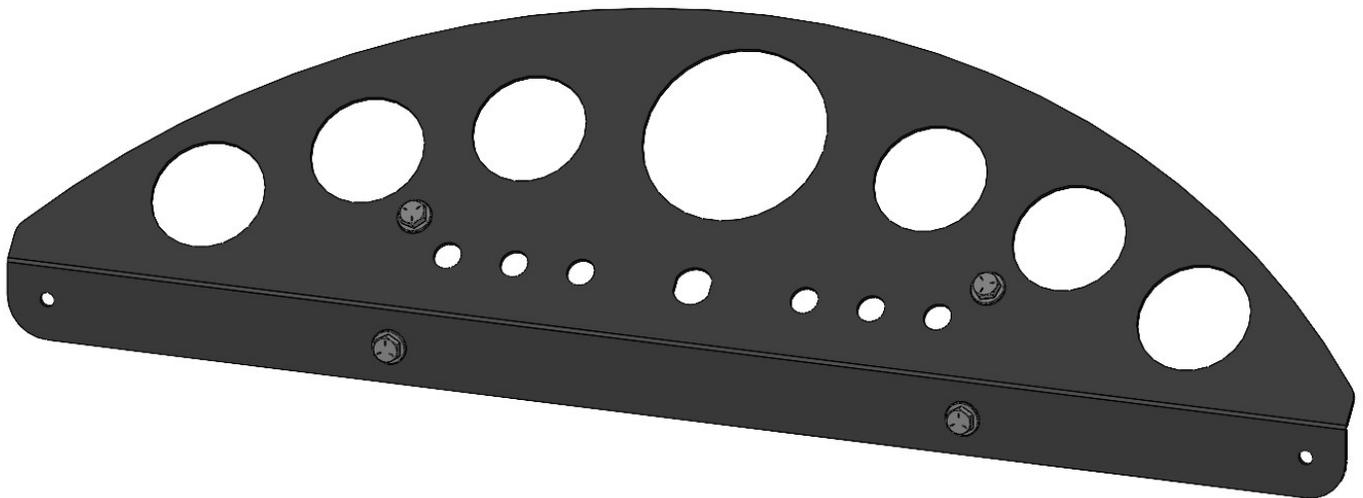

Electrical/Gauge Panel Assembly Instruction Manual

Important Notes for Assembly:

- This manual is for the Electrical/Gauge Panel add-on of the Running Engine Stand assembly. If you have not yet started with the Main Assembly instructions, start there before returning here.
- Use care when handling parts. There may be sharp edges and holes on components. Using thick protective gloves is recommended during the assembly process.
- Each bolt and nut should have the appropriately sized washer placed between the fastener and the frame.

Required Tools:

- Ratchet
- 7/16" Wrench
- 7/16" Socket
- Wire Strippers

If you are experiencing problems upon installation—

DO NOT RETURN THIS PRODUCT!


Most installation problems can be easily solved.

First contact technical support at:

Service@mechman.com


1 (888) MECHMAN or 865-522-6166

Included Components:

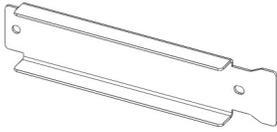


Battery Hold-Down Bracket

1x

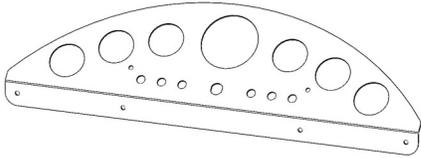

Gauge Panel

1x

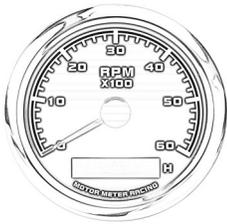

Tachometer

1x



Triple Gauge Kit

1x




Ignition Switch w/ Key

1x



Relay Box

1x

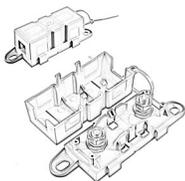

300 Amp Fuse Holder


1x



300 Amp Fuse


1x

Included Hardware:

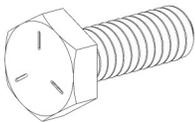


1/4"-20 x 0.75" Hex Bolt

2x

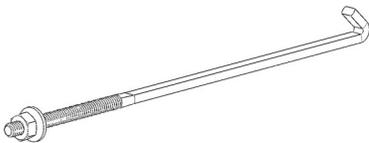

1/4"-20 x 9" Hold Down Bolt

 2x



1/4" Flat Washer

4x



1/4"-20 Nylock Nut

2x


Assembly Instructions:

Step 1: Attaching the Gauge Panel to the Assembly

Required Components: Required Hardware:

- 1x Gauge Panel
 - 2x 1/4"-20 x 0.75" Hex Bolt
 - 2x 1/4"-20 Nylock Nut
 - 4x 1/4" Flat Washer
- Use the 1/4"-20 x 0.75" Hex Bolts to attach the Gauge Panel and the Dash Gussets to the upper Radiator Support Crossmember.

Front View

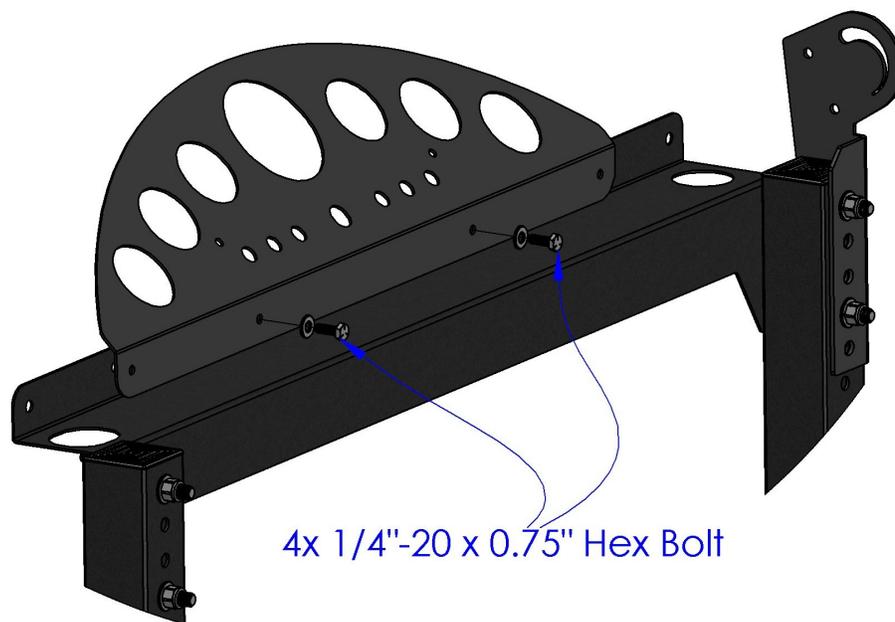

4x 1/4"-20 x 0.75" Hex Bolt

Back View



Assembly Instructions:

Step 2: Insert the Battery into to the Assembly


Required Components:

- 1x Battery Hold-Down Bracket
- 1x Group 34 Battery (not included)

Required Hardware:

- 2x 1/4"-20 x 9" Hold Down Bolt

- Use the 1/4"-20 x 9" Hold Down Bolts to clamp the Group 34 Battery to the Fuel & Battery Tray.
- **Note: There is room for up to two additional batteries in the Fuel & Battery Tray.**

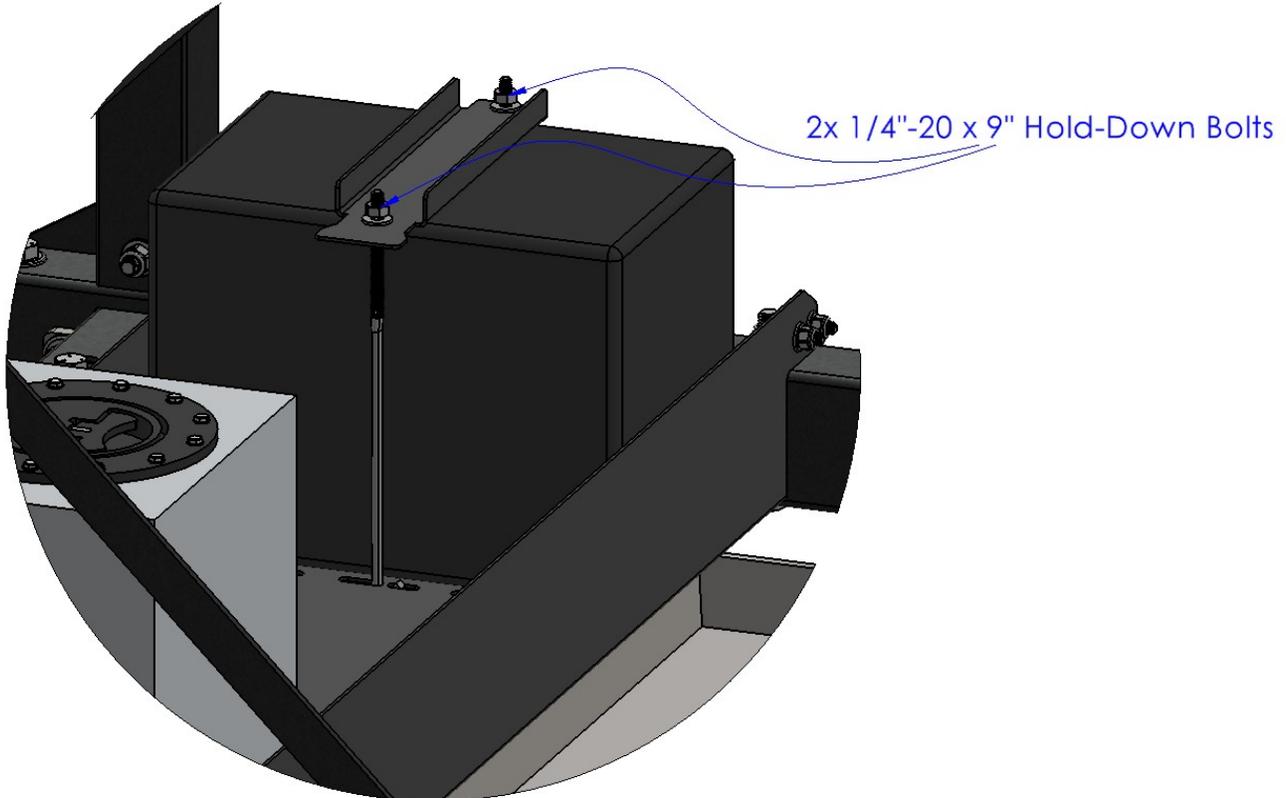

Electrical Schematic:

